

Homecast(Vison Asia)

Homecast Tuning Instructions

1. Press Menu
2. Press OK on Installation
3. Enter Pin 0000
4. Select Manual Channel Search & press OK
5. Press down arrow key to select frequency then pres right arrow key & from the list select 12546V 22500AUT
6. Press down arrow key and select FEC
7. Press right arrow key and change to 3/4
- 8 Press OK
9. Press OK on Yes button when ask to save changes.
10. Pres exit 3 times
11. Press OK to get the list of channles & look for ZOOM