


RETUNING YOUR SONIC RECEIVER




STEP 1
Using the Remote Control press "Menu" button. Main Menu screen appears with "Installation" highlighted



STEP 2
Click OK when "Installation" is highlighted and password window appears. Enter the digits "9 9 4 9" using the Remote Control

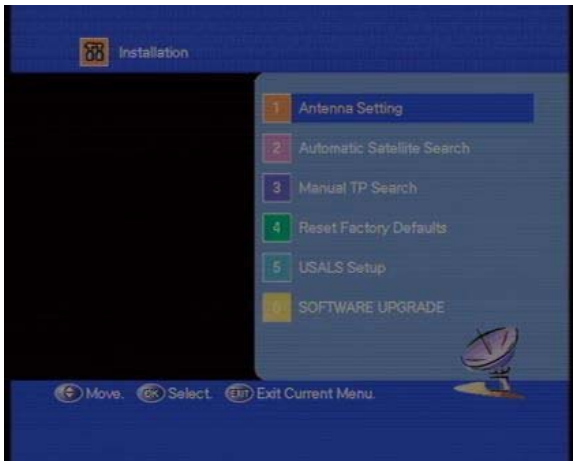

STEP 3
Installation Menu appears

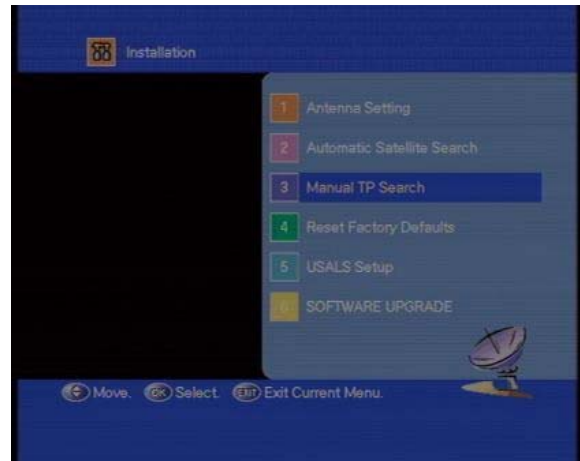

STEP 4
Using down key on Remote Control scroll down and highlight "Manual TP Search" and press "ok"



STEP 5
"Manual TP Search" Menu appears. Ignore the Dish name. Using down key scroll down to "Frequency"



STEP 6
Using Remote Control – enter the numbers "1 2 7 0 6"



STEP 7
Using down key scroll down to “Polarity”. Change it to “Vertical” using either the left or right keys on the Remote Control



STEP 8
Scroll down to “Symbol Rate” and enter the digits “ 2 2 5 0 0 ”



STEP 9
Next scroll down to “Code Rate” and change it to “3 / 4” using left or right keys on Remote Control. Scroll down to ‘Network Search’ and using the right arrow change it to ‘Enabled’ Check the signal strength. **Press “OK” on the remote control to start scanning**



STEP 10
The screen will show the “Scanning” Menu and channel names will appear



STEP 11
Window will appear asking you to save. Press “OK” on the Remote Control when “Yes” option is highlighted. Then press “Exit” button 3 times or until picture appears. **Please press ‘OK’ to bring up a list of all channels.**



STEP 12
Scroll to your favourite channel (Using Remote control do channel up). Please note Post the scanning the STU may store previous list of channels in their current channel position and the new channel list added to it.